

---

## TEC PRINT HEAD CLEANING INSTRUCTIONS

---

**We recommend this is carried out at every ribbon change and whenever print quality is compromised**

1. Switch off the TEC printer. Check the front panel lights are off



2. Open the printer lid.



3. Raise the print head assembly with the green lever (bottom left hand corner).



4. Note the ribbon path and then remove used ribbon from mountings by pushing against black spring-loaded spigot.



5. The print head should now be accessible and the part to clean is the brown strip.

6. Put on a glove to protect from any irritants and use a head cleaning wipe (or a soft clean cloth with methylated spirits or brake cleaner applied to it), to firmly (but carefully) clean the print head and bottom platen rubber drive roller.
7. Reverse the above, refitting the ribbon and closing the printer.

**Tel: 01252 749808**  
sales@sandhurstautoprint.co.uk

www.sandhurstautoprint.co.uk